



POS.	Tutti i tipi All types Alle Typen Tous les types Все типы	LU101	LU102	LU112	LU145	LU113
1	RG00034					
2	RG00064					
4		RG00297	RG00297	RG00297	RG00297	RG00027
5		RG00241	RG00241	RG00241	RG00241	RG00037
5a						
6		RG00296	RG00296	RG00296	RG00296	RG00028
7		RG00030	RG00029	RG00029	RG00135	RG00031
7a		RG00030	RG00029	RG00029	RG00134	RG00031
7b					RG00209	
8	RG00038					
8a						
9	RG00048					
10	RG00074					
12	RG00002					
13	RG00004					
14		RG00300	RG00318	RG00319	RG00320	RG00321
15	RG00052					
16	RG00233					

In produzione da Ottobre 2002  
In production from October 2002  
In Produktion vom Oktober 2002  
En production à partir d'octobre 2002  
В производстве с октября 2002 г.