

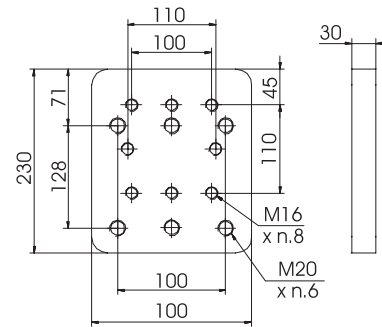
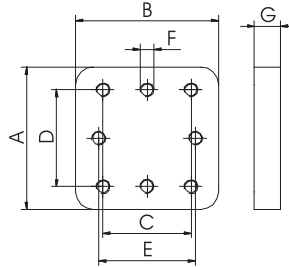


PIASTRE A SALDARE - WELD IN PLATES - ANSCHWEIßPLATTEN - PLAQUES À SOUDER

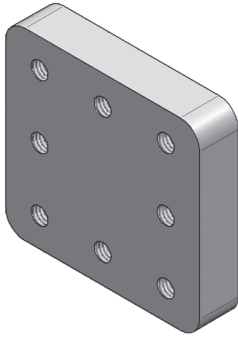

PS004


* Speciale per trasporto vetture per occhiioni flangiati standard e GS900
Special type for car transport for standard flanged drawbar eyes and GS900
Spezial version für Autotransporter für standard Flanschzugösen und GS900
Version spéciale pour porte-voitures, pour anneaux à brides et GS900

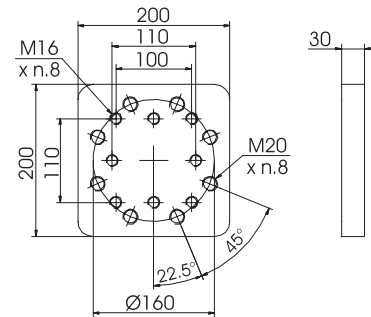

PS007



* Per occhiioni tipo OC68F8E
For Drawbar eye type OC68F8E
Für Zugösen typ OC68F8E
Pour Anneau type OC68F8E

| Tipo Type Typ Type | Codice Article number Artikelnummer Code article | A (mm) | B (mm) | C (mm) | D (mm) | E (mm) | F (mm) | G (mm) |
|-----------------------------|---|--|-----------|-----------|-----------|-----------|-----------|-----------|
| PS001 | PS00100 | 162 | 162 | | | | | |
| PS002 | PS00200 | 200 | 200 | 100 | 110 | 110 | M16 | 30 |
| PS003 | PS00300 | 160 | 240 | | | | | |
| PS004 | PS00400 | vedi disegno - see drawing - voir illustration | | | | | | |
| PS005 | PS00500 | 190 | 200 | 130 | 130 | 130 | M20 | 40 |
| PS006 | PS00600 | 210 | 210 | 140 | 160 | - | M16 | 40 |
| PS007 | PS00700 | vedi disegno - see drawing - voir illustration | | | | | | |
| PS008 | PS00800 | vedi disegno - see drawing - voir illustration | | | | | | |
| PS009 | PS00900 | vedi disegno - see drawing - voir illustration | | | | | | |
| PS010 | PS01000 | vedi disegno - see drawing - voir illustration | | | | | | |

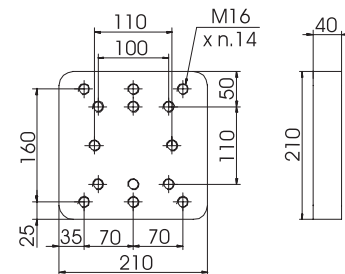



PS008

LOHR KIT

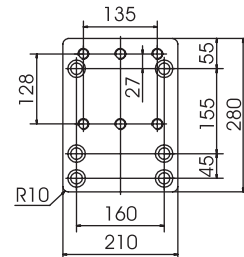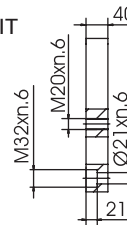

**TRAILER
SIDE**



PS009

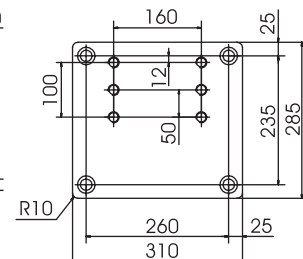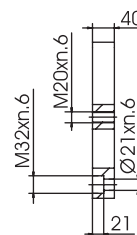

**TRUCK
SIDE**


PS010

MANICOTTI - WELDABLE BRACKETS - ZUGÖSENLÄGER - MANCHONS À SOUDER

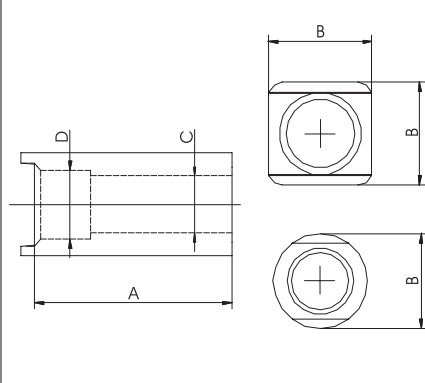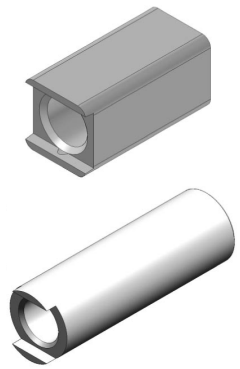


| Codice Article number Artikelnummer Code article | A (mm) | B (mm) | C (mm) | D (mm) | Occhione applicabile Applicable drawbar eye AnwendbareZügosen Anneaux compatibles |
|---|-----------|-----------|-----------|-----------|--|
| RO00036 | 245 | ○ 80 | 49,2 | 50,2 | 50R09-45R07 |
| RO00038 | 245 | □ 90x90 | 49,2 | 50,2 | 50R09-45R07 |
| RO00039 | 165 | ○ 60 | 41 | - | 45T01 |
| RO00001 | 210 | ○ 89 | 49 | - | 76T02 |
| RO00014 | 258 | ○ 76 | 47,3 | - | 50R05-45R04 |
| RO00041 | 173 | □ 90x90 | 60 | - | 50R10-40R02-57R10-76R10 |
| RO00059 | 185 | □ 90x90 | 60 | 76 | 68R10 |
| RO00060 | 185 | □ 100x100 | 60 | 76 | 68R20 |

VITI - SCREWS - SCHRAUBEN - VISSERIE

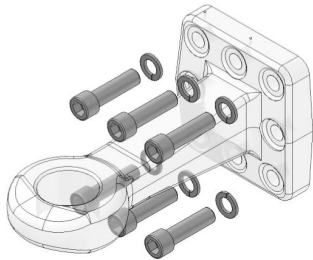

| Per occhioni tipo For Drwbar eye type Für Zügoese Typ Pour Anneau type | Codice Kit Kit Code Bausatz Code Référence |
|---|---|
| 40F60 | RO00025 |
| 40F61 | |
| 50F60 | |
| 57F | RO00055 |
| 50F8 | RO00026 |
| 52F8 | RO00046 |
| 68F8 | RO00058 |

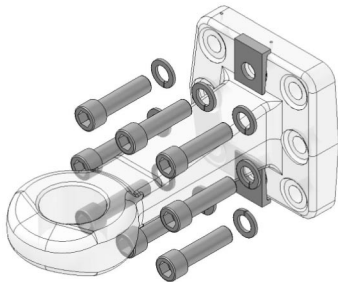

| | |
|------|---------|
| 51F8 | RO00035 |
|------|---------|


BUSSOLA - BUSH - BUCHSE - BAGUES



| Per occhioni tipo For Drwbar eye type Für Zügoese Typ Pour Anneau type | Codice Bussola Bush Code Buchse Code Référence |
|---|---|
| 40W-R | RO00017 |
| 50R | RO00004 |
| 50W01/02/05 | |



| | |
|-------------|---------|
| 40F | RO00024 |
| 45R | RO00003 |
| 45W05 | |
| 45W00 | RO00006 |
| 50F/51F/52F | RO00016 |
| 50R | RO000T4 |
| 50W01/02/05 | |
| 50W03 | RO00005 |
| 50W04 | RO00002 |
| 70W | RO00057 |



| | |
|----|---------|
| 57 | RO00054 |
|----|---------|